




# 0127 CENTER HUNG PIVOT SET INSTALLATION INSTRUCTIONS

## 1. LOCATE PIVOT


- MEASURE 1-5/16" OUT FROM DOOR JAMB ON CENTERLINE OF DOOR. THIS IS THE LOCATION OF SPINDLE CENTER.
- ROUND HEEL EDGE AND PREPARE DOOR FOR 1/16" MIN. CLEARANCE THRU ENTIRE OPENING.

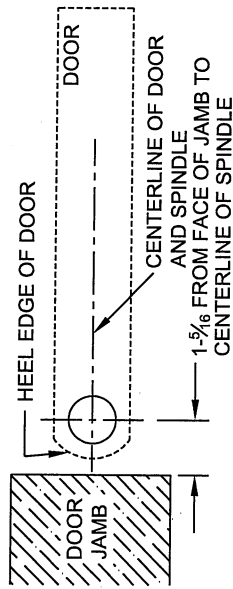

## 2. INSTALL BOTTOM PIVOT SET

NOTE: BOTTOM PIVOT MUST BE LEVEL. USE LEVEL PER ILLUSTRATION.

- INSTALL DOOR PORTION OF BOTTOM PIVOT PER TEMPLATE.
- MORTISE JAMB TO RECEIVE JAMB PORTION OF TEMPLATE.

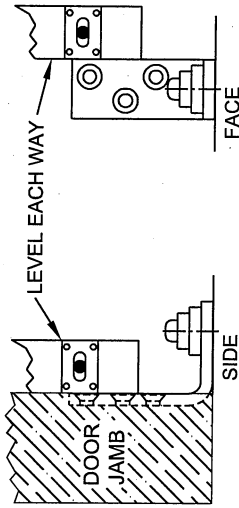


## 3. INSTALL TOP PIVOT AND PIVOT ARM

- INSTALL DOOR PORTION OF PIVOT PER TEMPLATE.
- INSTALL JAMB PORTION OF TOP PIVOT IN FRAME PER TEMPLATE.
- CENTERLINE OF PIVOT SHOULD ALIGN WITH CENTERLINE OF BOTTOM SPINDLE. USE A PLUMB LINE TO ASSURE ACCURACY.
- MORTISE BOTTOM OF DOOR TO RECEIVE ARM (MORTISE VARIES WITH REQUIRED CLEARANCE. REFER TO TEMPLATE.)


SEE  
FIGURE 1

## 4. HANG DOOR

- SET BOTTOM PIVOT ARM INSTALLED IN DOOR ON PIVOT SPINDLE AND ENGAGE THE TOP PIVOT PIN BY TURNING PIN RETRACTING SCREW CLOCKWISE.

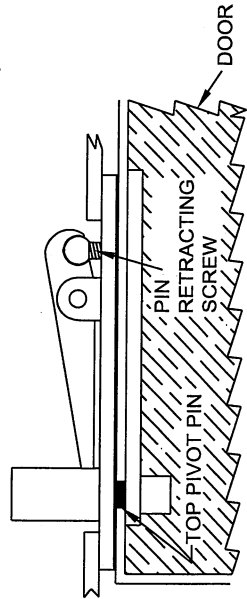

**FIGURE 1**

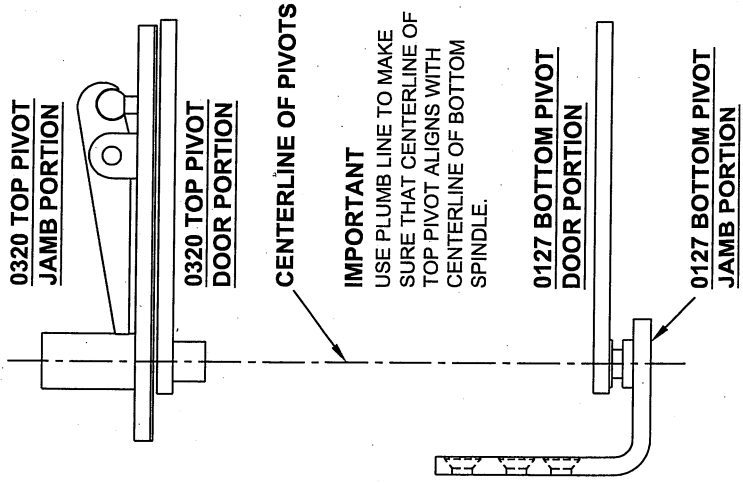

## 5. DISMOUNT DOOR (IF REQUIRED)

- OPEN THE DOOR ENOUGH TO DISENGAGE THE TOP PIVOT. ROTATE THE DOOR TO CLOSED POSITION AND WITH THE TOP OF THE DOOR LEANING TOWARD YOU, LIFT THE DOOR CLEAR OF THE SPINDLE.