


# HOLE PATTERN CHART

Caution: Not all holes shown below need to be drilled. Use the diagram AND the chart to determine the holes that you need to drill for your trim and function combination.

Lockset function	Inside holes						Outside holes					
	1	2	4	5	6	6	1	2	4	5	6	
6610 (Passage/Closet Latchset)		■	■	■	■	■		■	■	■	■	■
6632 (Privacy)	■	■	■	■	■	■	■	■	■	■	■	■
6637 (Store Door Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6638 (Entry/Restroom Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6641 (Asylum Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6645 (Hotel/Motel Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6652 (Office Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6653 (Entry/Office Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6654 (Dormitory/Bedroom Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6656 (Classroom Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6657 (Dormitory Lock)	■	■	■	■	■	■	■	■	■	■	■	■
6658 (Storeroom/Exit Lock)	■	■	■	■	■	■	■	■	■	■	■	■

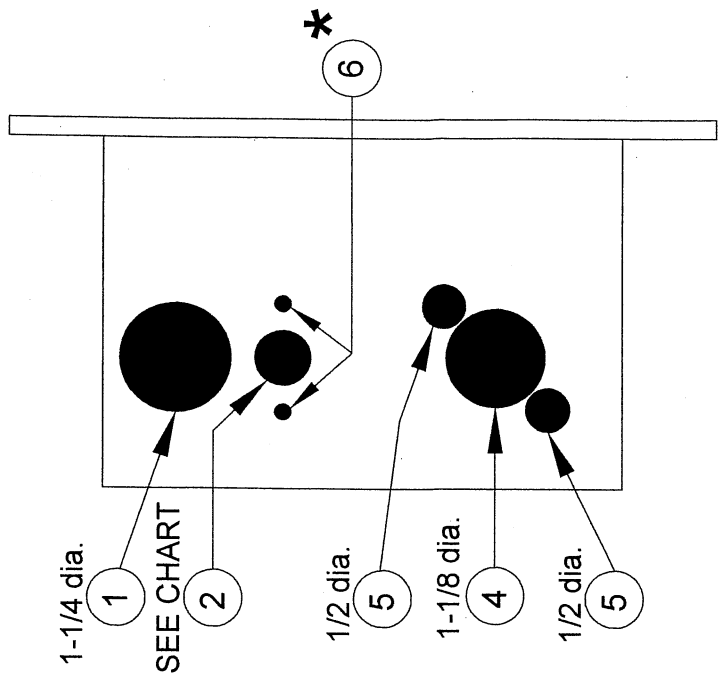

\* Determine trim holes based on trim type.

ADA recommends mounting centerline of lock 44" from top of finished floor.

-OR- Check local ordinance for proper height.

**ABH**  
 www.abhmfg.com  
 E-mail: abhinfo@abhmfg.com  
 Architectural Builders Hardware Mfg., Inc.  
 1222 Ardmore Ave., Itasca, IL 60143  
 630.875.9900; FAX 800.9FAXABH (932.9224)

6600-69600-1-08.DWG

6600 / 69600

REVISED 10-20-11

© 2011 ABH Mfg., Inc.  
 printed in USA


# INSTALLATION SPECIFICATIONS

Lock case holes:

- ① Cylinder hole-1-1/4" dia.
- ② Turn knob-5/8" dia. / Emergency key-1/2" dia.
- ④ Trim hole-1-1/8" dia.
- ⑤ Thru-bolt holes- (two required) 1/2" dia.

Notes:

- 1, Before drilling check the hole pattern chart.
- 2, The maximum door-to-frame gap is 3/16".
- 3, Allow 3/64" clearance for the strike box thickness.
- 4, For metal door, lock case support is required from the door manufacturer.
- 5, Tap for a #12-24 machine screw or drill for a #12 wood screw (a combination screw is supplied).

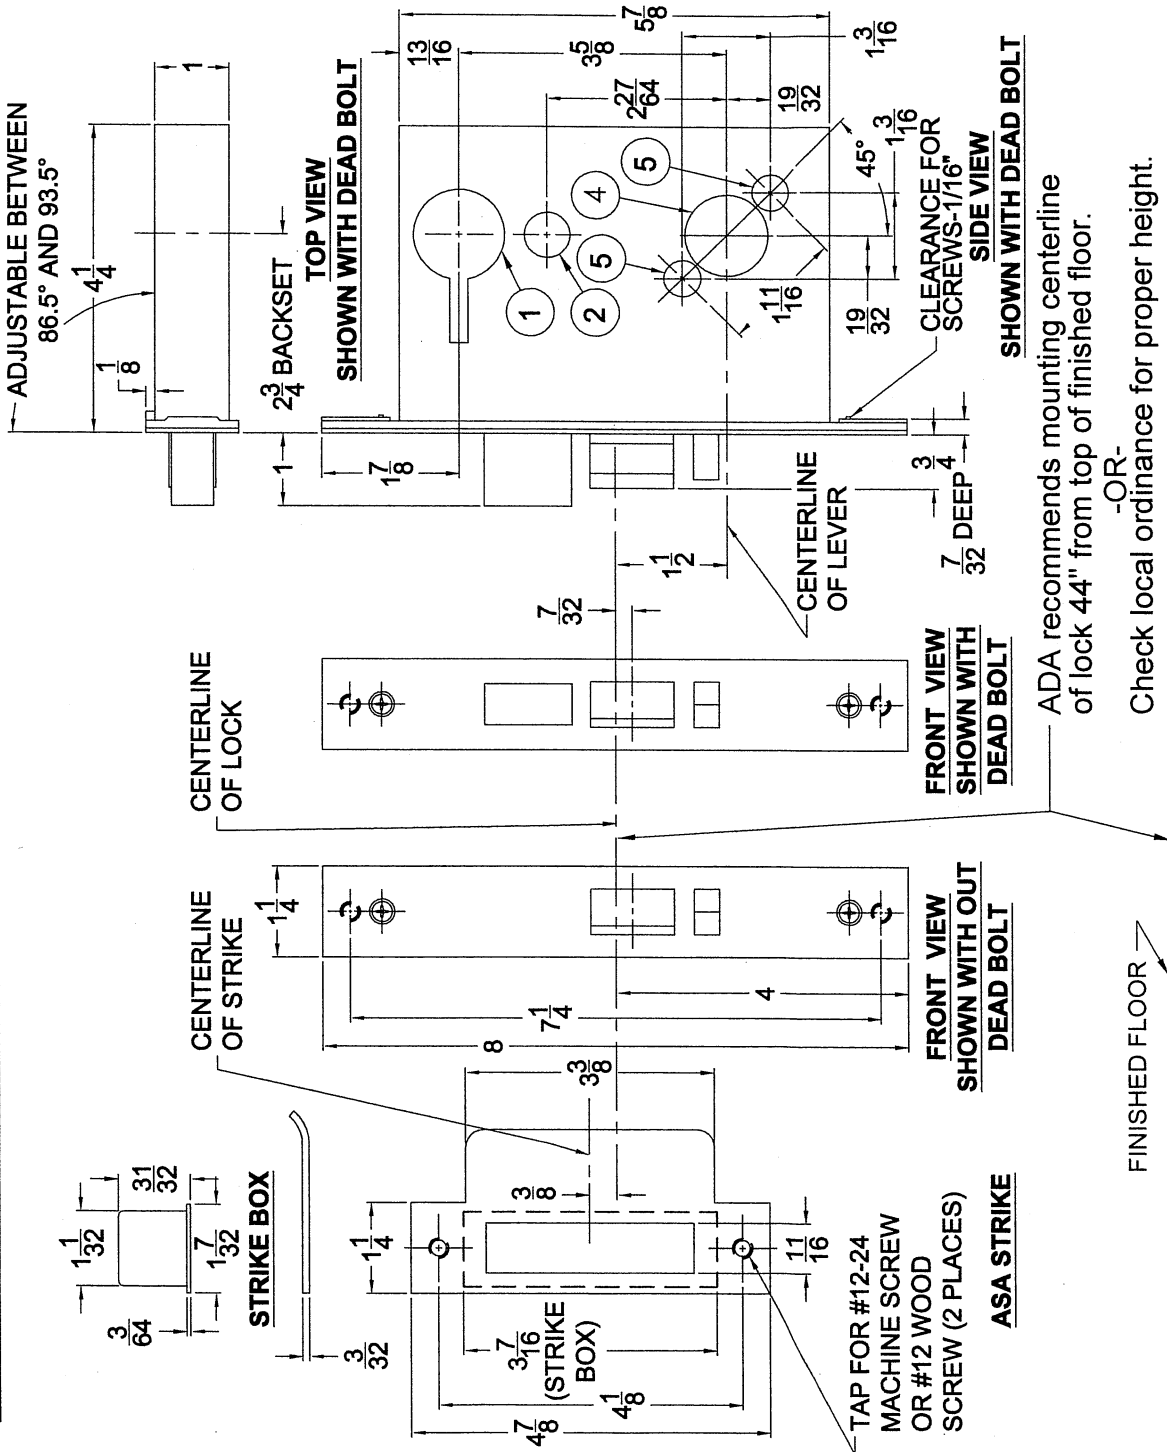

www.abhmf.com  
 E-mail: abhinfo@abhmf.com  
 Architectural Builders Hardware Mfg., Inc.  
 1222 Ardmore Ave., Itasca, IL 60143  
 630.875.9900; FAX 800.9FAXABH (932.9224)

# ABH

6600 / 69600  
 REVISED 10-20-11

6600-69600-2-08.DWG

ADA recommends mounting centerline of lock 44" from top of finished floor.  
 -OR-  
 Check local ordinance for proper height.