
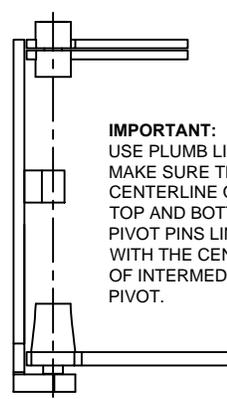
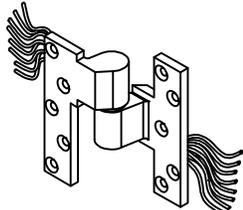
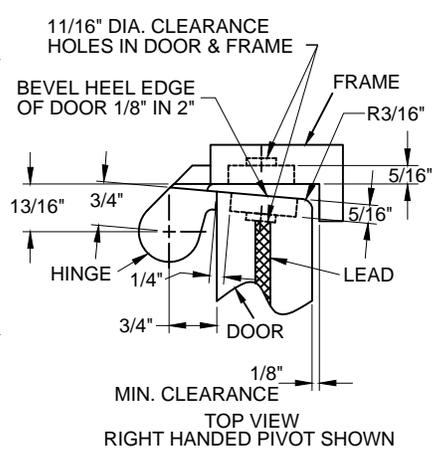
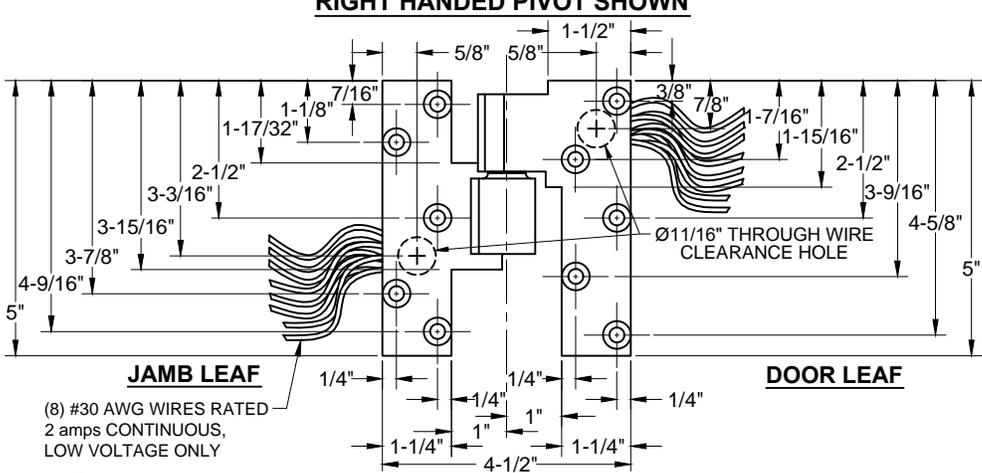
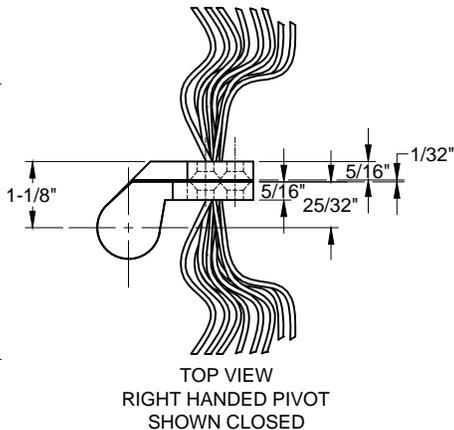


EL019 ELECTRIFIED INTERMEDIATE PIVOT FOR LEADLINED, 3/4" OFFSET, HANDED

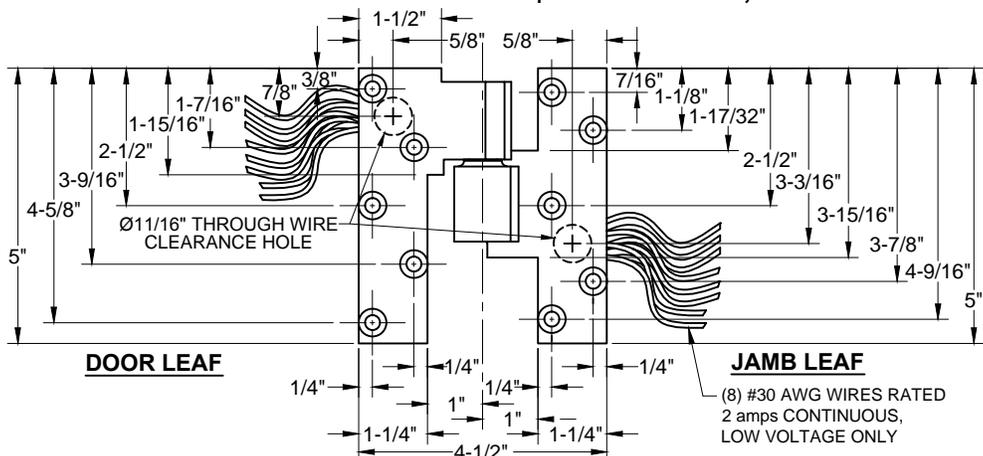

- NOTES**
- DO NOT SCALE DRAWING.
 - DIMENSIONS ARE GIVEN IN INCHES.
 - PIVOT DRILLED FOR 1/4-20x3/4" FHMS OR #14x1-1/2" FHWS.
 - RIGHT HAND SHOWN.
 - MAX. LEAD THICKNESS 9/32" IN CENTER OF DOOR.

- DOOR AND FRAME PREPARATION**
- PREPARE DOOR & FRAME PER DRAWING ABOVE.
 - THROUGH WIRE TYPE PIVOTS ARE NON-LOAD BEARING AND MUST BE MOUNTED IN THE CENTER PIVOT POSITION ONLY.
 - DO NOT ATTEMPT TO DISASSEMBLE THE PIVOT, IT MUST BE INSTALLED ASSEMBLED. IF PIVOT IS DISASSEMBLED, MANUFACTURER'S WARRANTY WILL BE VOID.
 - WIRE CLEARANCE HOLES MUST BE FREE OF BURRS AND SHARP EDGES. CHECK TO MAKE SURE THAT PIVOT FITS FREELY IN PREP TO AVOID DAMAGE AND/OR SHORTENED LIFE.
 - DO NOT FORCE PIVOT INTO PREP HOLES.

- INSTALLATION**
- HANG THE DOOR ON THE TOP AND BOTTOM PIVOTS FIRST. (NOTE: THESE ARE NON-ELECTRICAL PIVOTS).
 - ATTACH WIRES IN ACCORDANCE WITH PROJECT WIRING DIAGRAMS.
 - OPEN DOOR TO 90° OR MORE FOR ACCESS TO JAMB PREPS.
 - EXTRACT INTERIOR WIRING THROUGH THE PREP HOLES FROM THE DOOR AND JAMB.
 - TERMINATE WIRE CONNECTIONS WITH APPROPRIATE CRIMP SPLICES OR WIRE NUTS. NOTE: IT IS HELPFUL TO STAGGER TERMINATIONS. THIS ALLOWS FOR EASY INSERTION OF WIRES THROUGH PREP HOLES.
 - DO NOT HANG PIVOT BY WIRES DURING INSTALLATION OR SERIOUS DAMAGE COULD OCCUR.
 - INSULATE ALL ENDS OF UNUSED WIRES.
 - AFTER ALL TERMINATIONS ARE COMPLETED, CAREFULLY SLIDE WIRES THROUGH PREP HOLE MAKING SURE THAT WIRES ARE PLACED SO THEY WILL NOT BE CUT OR PINCHED AS PIVOT IS INSTALLED.



www.abhmfg.com
E-mail: abhinfo@abhmfg.com
Architectural Builders Hardware Mfg., Inc.
1222 Ardmore Ave., Itasca, IL 60143
630.875.9900; FAX 800.9FAXABH (932.9224)