


1. Select required backset 2-3/4" , 3-3/4" , 5" or 7" .
2. Fold on dashed line.
3. Place fold on low edge of bevel.
4. Line up center lines.
5. Center punch all holes.
6. Drill holes (For hollow metal doors, do not drill thru. Center punch & drill holes from both sides of door).

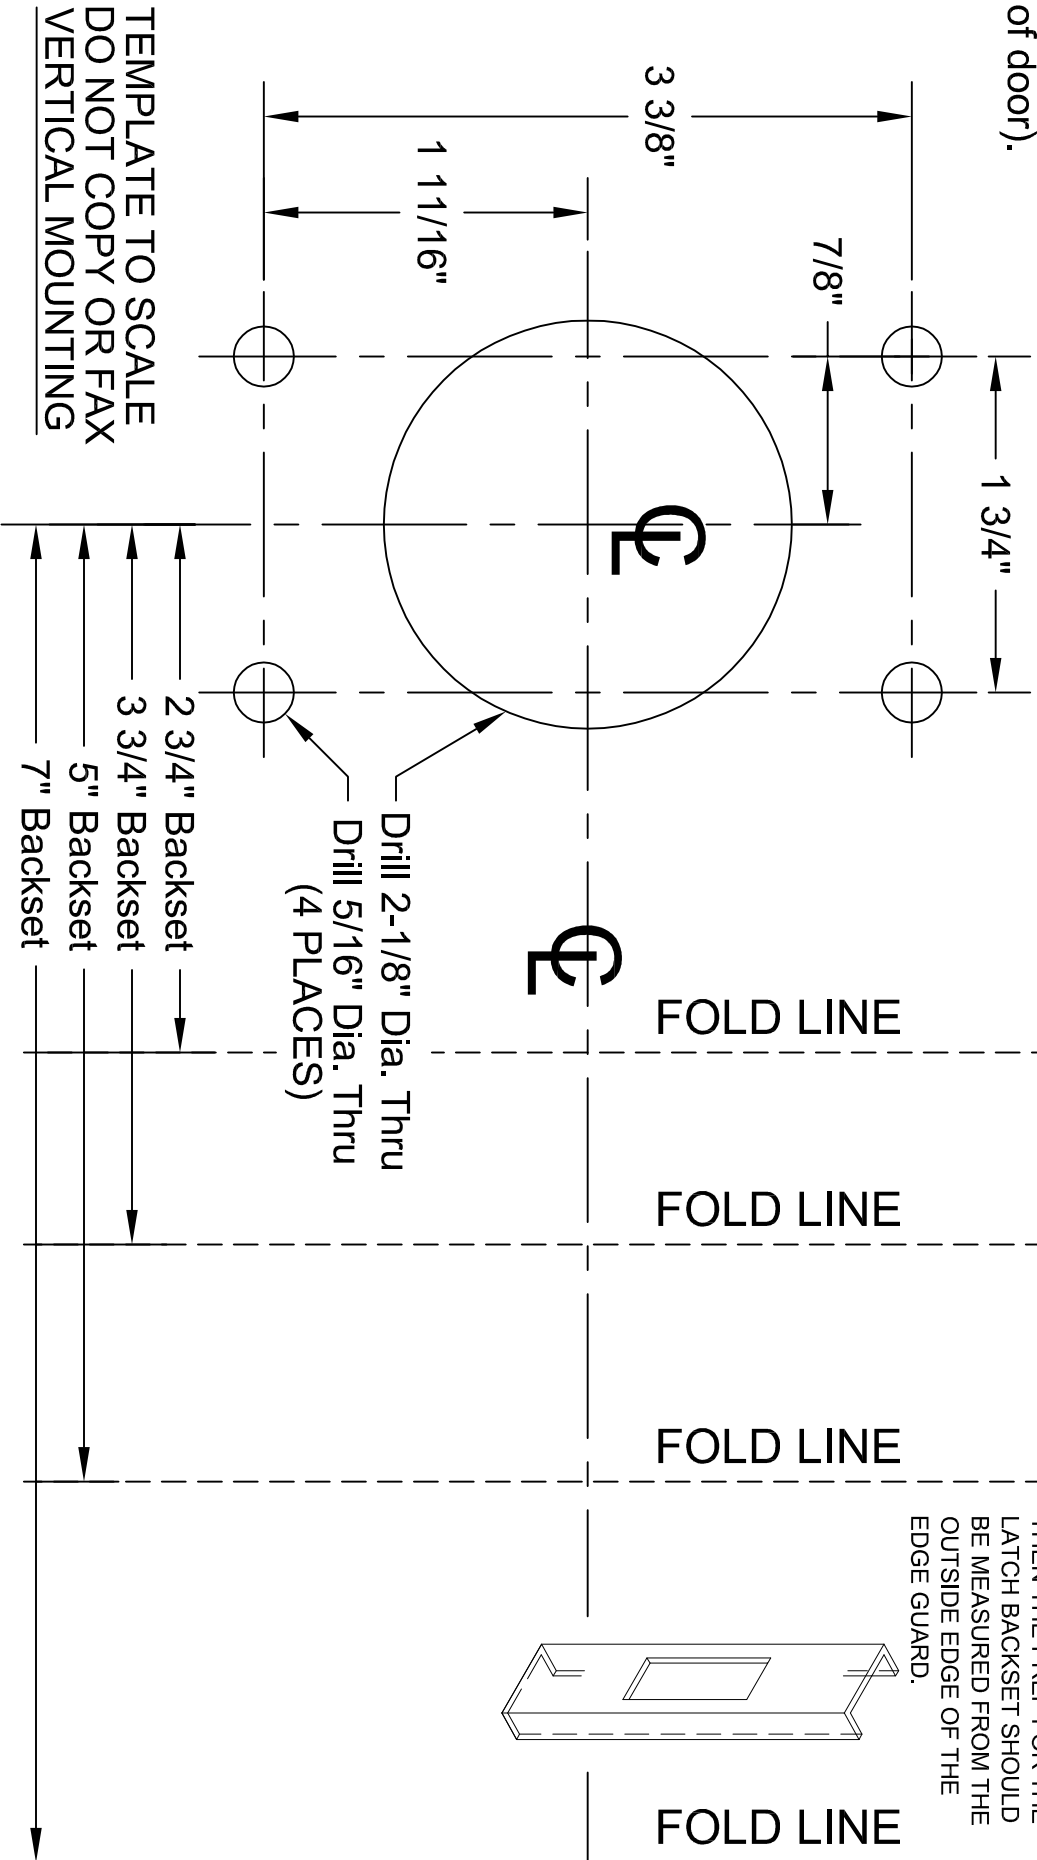

TEMPLATE TO SCALE
DO NOT COPY OR FAX
VERTICAL MOUNTING

